 


Factory Reset Instruction

 


M Motorized TV Lift Large

EAN: 735007373 5969

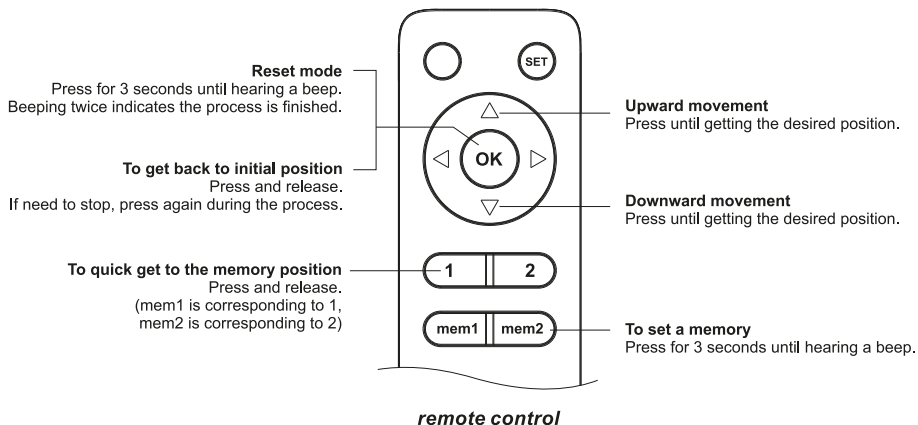


1

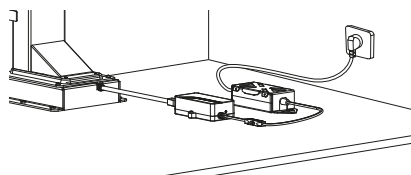


Make sure the mount is powered on.

 2

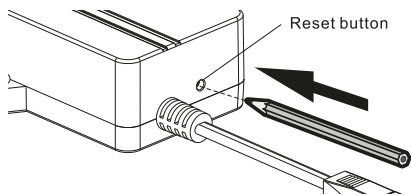

Press and release the button inside the control box as shown. It will beep once. After that, the remote control and the control box begin to match. (This process will take at most 10 seconds)

 3

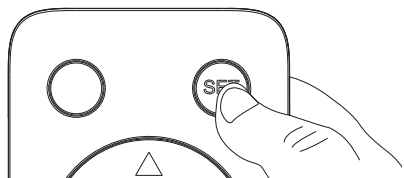

Press and release **SET** button on the remote control, then you will hear beeps. Wait for 10 seconds until hearing the final beep, the matching will complete and exit the program. Now, you can control your TV lift directly from the remote control.



Please keep the power on during the resetting.

Installation manual

M MOTORIZED TV LIFT LARGE

EAN: 7350073735969

en Installation Manual

ar تثبيت التلفاز

cz Instalaci ní manuál

de Installationsmanual

de Installationsanleitung

eo Paigaldusjuhend

el Οδηγίες εγκατάστασης

es Manual de instalación

fi Asennusohje

fr Installation Manuel

he הנקתה ירידמ

hu Szerelési kézikönyv

it Manuale di installazione

jp 取り付け説明書

kr 설치 설명서

lt Montavimo instrukcija

lv Uzstādīšanas rokasgrāmata

nl Installatie handleiding

no Installasjonsbåndbok

pl Instrukcja instalacji

pt Manual de instalação

ro Manual de instalare

ru Инструкция по установке

 
sk Inštalaci ný manuál

sr Navodila za montažu

sv Installationsmanual

tr Montaj kılavuzu

zh 安装手册

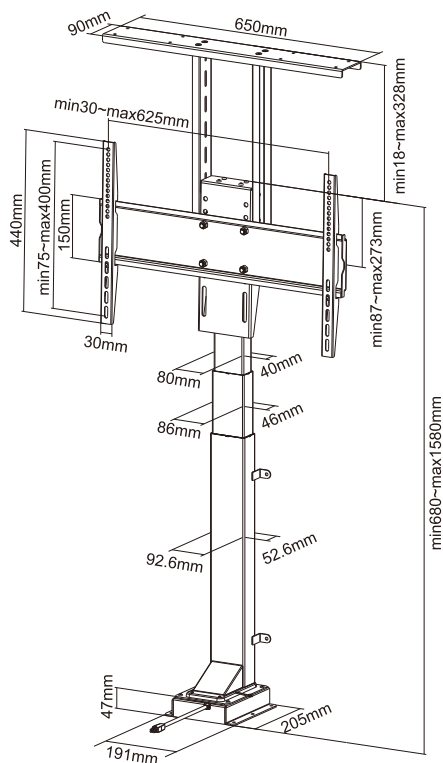

en IMPORTANT!
Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value.
If screws are included they may not be suitable for the material of your wall, ceiling or floor.
Replace the screws with suitable ones if needed.
In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.

الملاحظة: شاشة البلزما أو LCD أو الشاشات أو جهاز العرض أو شاشة جهاز العرض أو شاشة هاي فاي الأخرى أجهزة ذات قيمة عالية. كانت التواضع مرفقة، فقد لا تكون مناسبة لعامة الناس أو السقف أو الأرضية. شغل التواضع أخرى مناسبة إذا لم الأمر.

DŮLEŽITĚ!
Váš plazmový nebo LCD televizor, projektor, plátno a další elektrotechnické vybavení je výsokce hodnotné.
Pokud jsou součástí balení produktu šrouby, zkontrolujte, zda jsou vhodné pro upevnění ke stěně, stropu nebo podlaží v místě instalace.
V případě, že nebudou přibalené šrouby vyhovovat, vyměňte je.
Pokud budete mít oli přmontáži tohoto produktu potíže, obraťte se na zkušeného odborníka.

da **VIGTIGT!**
 Din plasmaskærm, LCD-skærm, tv, projektor, projektorsskærm eller andet HIF-udstyr repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt.
 Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.

nl BELANGRIJK!
Uw Plasma LCD TV, Projector, Projector scherm of andere HiFi-apparatuur vertegenwoordigt een aanzienlijke waarde.
Het kan zijn dat de bijgeleverde schroeven niet geschikt zijn voor uw toepassing. In dat geval dient u ze te vervangen door schroeven die wel geschikt zijn. Twijfelt u, raadpleeg dan een professional.

EE TÄHTIS! Teie teler, projektor, projektori ekraan või muu HiFi seade on suure väärtusega. Kui kinnitusel on komplektis paigalduskruidid, siis ei pruugi need sobida Teie seina, lae või põranda materjaliga. Vajadusel vahetage kruvid sobivate vastu.

de ACHTUNG! Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellt einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben. Wenn Sie bezüglich der Montage des Produkts unsicher sind, wenden Sie sich an einen Fachman

el ΣΗΜΑΝΤΙΚΟ!
 Οι ηλεκτροστάτες Plasma, LCD, α κανονικές τηλεοράσεις, οι οθόνες προβολών ή άλλες συσκευές HiFi έχουν μία αξιοσημείωτη αξία. Αν περιλαμβάνονται βίδες τους να μην είναι κατάλληλες για το να ταιριάξουν το ταβάνι ή του ημιμαγνητοσκόπου. Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητη.
 Στην περίπτωση που δεν έχετε σιγούρα για κάποιες ζητήματα σχετικά με την προσαρμογή αυτού του προϊόντος, παρακαλούμε συμβουλευτείτε έναν ειδικό.

05 IMPORTANTE! Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que estén formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso. Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.

fi TÄRKEÄÄ!
 Plasma- tai nestekidenyttyjen, televisioiden, projektorien ja niiden valkokankaiden sekä muiden hilaifaitteiden arvo on huomattava. Laitteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin. Korvaa ne tarvittaessa sopivilla ruuveilla.
 Mikäli olet epävarma mistä tahansa tämän tuotteen kiinnittämiseen liittyvästä seikasta, ota yhteys asiantuntijaan.

fr IMPORTANT!
 Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel Hi Fi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées.
 Si vous avez des doutes quant au montage de ce produit, veuillez consulter un profession-

hu FONTOS! Plazma, LCD TV-d, projektorod, vetítővásznad vagy egyéb műszaki berendezéseid tekintélyes értéket képvisel. Ha a csavarokat tartalmazza, akkor sem biztos, hogy alkalmas a berendezés, hogy falra, mennyezetre, vagy a padlóhoz rögzítsd. Cseréld ki a csavarokat a megfelelőre, ha szükséges. Abban az esetben, ha nem biztos a termék beépítésével kapcsolatban, forduljon szakemberhez.

it **IMPORTANTE!**
I vostri plasma, LCD, TV, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti in dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più idonee in caso di necessità.
Nel caso riscontriate problemi nel montaggio di questo prodotto, consultate un tecnico specializzato.

重要！
 あなたのプラズマ、LCDは、テレビ、プロジェクタ、プロジェクタースクリーンまたは他のハイパワースクリーン機器が与える値を表します。
 ネジが含まれている場合、彼らはあなたの壁、天井や床の材質に通していませんがもしもそう
 必要に応じて適切なものでネジを取り替えます。
 ケースでは、本製品の取り付けのいずれかの側面に関して不明な点があるプロに相談して
 ください。

no VIKTIG!
 Din plasma, LCD, TV, projektor, projektor skjerm eller annet HIFI-utstyr har betydelig verdi. Hvis skruer følger med, er det ikke sikkert at de passer til materialet i vegg, taket eller gulvet. Bytt skruene i skruer som er egnet som nødvendig.
 Hvis du er usikker når det gjelder montering av dette produktet, må du kontakte en profesjonell.

Monitor plazmowy, LCD, telewizor, projektor, ekran projekcyjny lub inny sprzęt HiFi stanowi znaczną wartość. Jeśli dołączono do niego śruby mocujące, mogą one nie być odpowiednie do materiału, z którego wykonane są dane ściany, sufit lub podłoga. W razie potrzeby należy je zastąpić odpowiednimi śrubami.

W razie jakichkolwiek wątpliwości dotyczących montowania tego urządzenia należy zasięgnąć porady u specjalisty.

pt **IMPORTANTE!**
O seu Plasma, LCD, TV, projetor, tela de projeção ou outro equipamento de HiFi representam um valor considerável.
Se os parafusos estão incluídos eles podem não ser adequados para o material da sua parede, teto ou chão.
Substitua os parafusos com os adequados, se necessário.
Em caso de dúvida sobre quaisquer aspectos da montagem deste produto, consulte um profissional.

SVARĪGI!
Jūsu Plasma, LCD, TV, projektora ekrāns vai cita HIFI iekārtas veido ievērojam vērtību.
Iekļautās skrūves var būt nepiemērotas jūsu sienai, griestiem vai grīdas materiāliem.
Nomainiet skrūves ar piemērotām skrūvēm, ja nepieciešams.
Gadījumā, ja jūs neesat pārliecināts par jebkuru šo produktu montāžas un stiprinājumu aspektiem, lūdz konsultēties ar speciālistu

SVARBU! Jūsų plazminis TV, LCD, LED televizorius, projektorius, projektorius ekranas ar kita HiFi įranga turi didelę vertę. Jei varžytis yra komplekts, jie gali netikti pas Jus panaudotoms sienų, lubų ar grindų medžiagoms. Pakeiskite varžtus į tinkamus, jei reikia. Jei nesate tikras dėl bet kuro šio produkto montavimo aspekto- prašome kreiptis į profesionalus.

! IMPORTANT!
 Plasma TV, LCD, TV, projector, ecran de proiectie sau alte echipamente HiFi reprezintă o valoare considerabilă.
 În cazul în care suruburile sunt incluse ele nu pot fi potrivite pentru materialul petelutului dvs. tavan sau podea.
 Remontați suruburile cu cele adecvate, dacă este necesar.
 În cazul în care nu sunteți sigur cu privire la orice aspecte ale montării acestui produs vă rugăm să consultați un profesionist.

ВНИМАНИЕ! Каими бы оборудованием HiFi вы ни пользовались, будь то плазменный, ЖК или стандартный телевизор, проектор или проекционный экран, - все они представляют значительную ценность. Не всегда крепления, прилагаемые в комплекте, подходят к материалу ваших стен, потолка или пола. При необходимости замените их на более подходящие.

Если у вас есть какие-либо сомнения относительно того, как крепить данный продукт, пожалуйста, проконсультируйтесь у квалифицированного специалиста.

SV VIKTIGT! Din plasmaskärm, LCD-skärm, TV, projektor, projektorskärm eller annan HiFi-utrustning representerar ett ansenligt värde. Om skruvar medföljer utrustningen är det inte säkert att de passar för materialet i väggen, taket eller golvet! Byt ut skruvarna mot lämpliga skruvar om så krävs. Kontakta en expert om du är osäker på något i samband med monteringen av produkten.

DŮLEŽITĚ!
Váš plazmový alebo LCD televizor, projektor, platno a ďalšie elektrotechnické vybavenie je vysoko hodnotné.
Pokiaľ sú súčasťou balenia produktu skrutky, skontrolujte, či sú vhodné pre upnutie k stene, strochu alebo podlahe v mieste inštalácie.
V prípade, že nebudú pribalené skrutky vyhovovať, vymeňte ich.
Pokiaľ budete mať pri montáži produktu poľaže, obráťte sa na skúseného odborníka

sl POMEMBNO!
Vaš Plasma, LCD, TV, projektor, projekcijsko platno ali drugo HiFi oprema predstavlja pomembno vrednost.
Če so vključeni vijaki ne smejo biti primerni za material svojega steno, strop ali tla.
Ponovno namestite vijake z ustreznimi tiste, če je potrebno.
V primeru, da ste prepričani o vseh vidikih vgradnje tega izdelka se obrnite na strokovnjake.

ÖNEMLİ!
Plazma, LCD, TV, Projektör, Projektör Ekranınız veya diğer HiFi cihazınız son derece değerlidir. Birlikte verilen vidalar duvar, tavan veya döşeme teçhizatınıza uygun olmayabilir. Gerektiğinde vidaları uygun olanlara değiştirin.
Bu ürünün monte şekilleri ile ilgili sorunlarınız olması halinde bir uzmandan yardım alın.

zh 重要提示！
您的等离子、LCD、TV、投影机、投影仪屏幕或其它HiFi设备都有着不菲的价值。如果附带有螺钉，它们可能不适合您的墙壁、天花板或地板。如果需要，请将螺钉更换为适当的型号。

WARRANTY CARD

MULTIBRACKETS™ Limited Warranty
Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty:

- **FIVE (5) years** for metal video monitor mounts; all racks and non-electrical rack accessories
- **TWO (2) years** for gaslifts and sit-stand workstations
- **ONE (1) year** for all motorized and/or automated products, plastic speaker mounts, all speaker stands; all furniture; all wood (MDF) accessories

 
 
 
 
For warranty claims made during the Warranty Period, MULTIBRACKETS will replace any defective product free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges.


This limited warranty is void if the product is not purchased from a Multibrackets authorized distributor. If the purchaser of the product is not a Multibrackets authorized distributor, the product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.

Multibrackets™ Stockholm Sweden 2016,
www.multibrackets.com

The content of this manual is subject to change without further notice. The latest version of this manual can be found online under the product name on the website: www.multibrackets.com

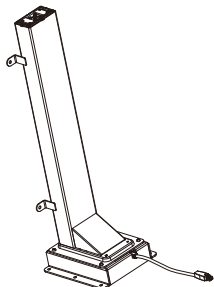
						
	B (x1)		C (x2)		D (x1)	
A (x1)						
	E (x1)			F (x2)		G (x1)
						
H (x1)	I (x1)	J (x20)	K (x2)	M6x10 (x4) L	M6x12 (x8) M	M10x20 (x4) N
						
O (x4)	4mm (x1) P	6mm (x1) Q	R (x1)	S (x1)		T (x1)
						
M5x14 (x4) M-A		M6x14 (x4) M-B		M6x30 (x4) M-C		
						
M8x30 (x4) M-D			M8x50 (x4) M-E			
						
M-F (x4)		M-G (x8)		M-H (x8)		

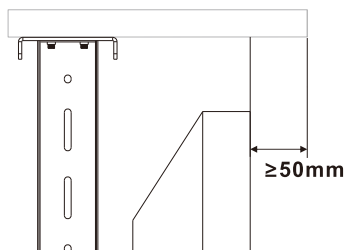 


Note:
In order to avoid collision and wire pulls, keep the control box and all cables away from the TV lift.

[illegible]

 
3

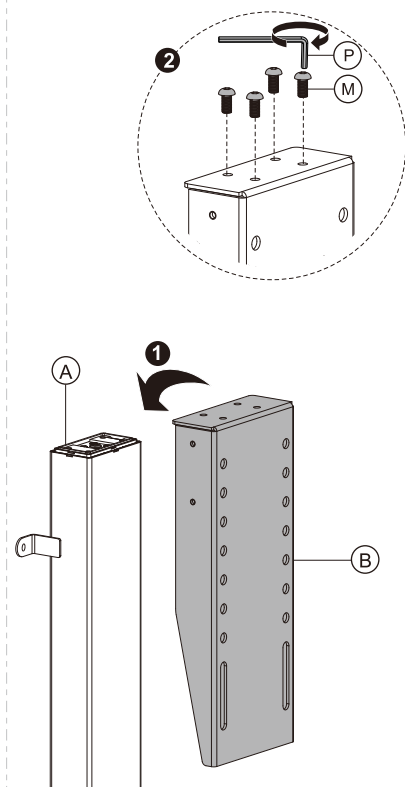


4

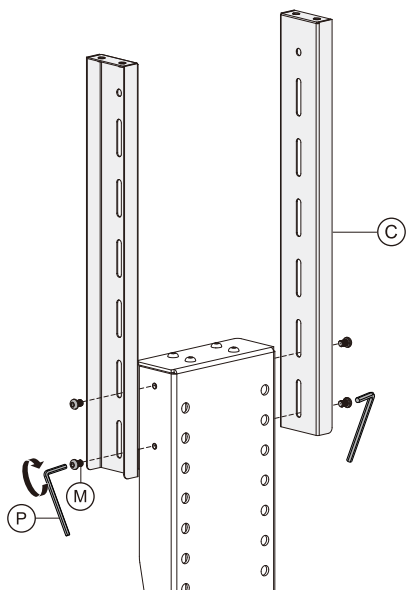 



5

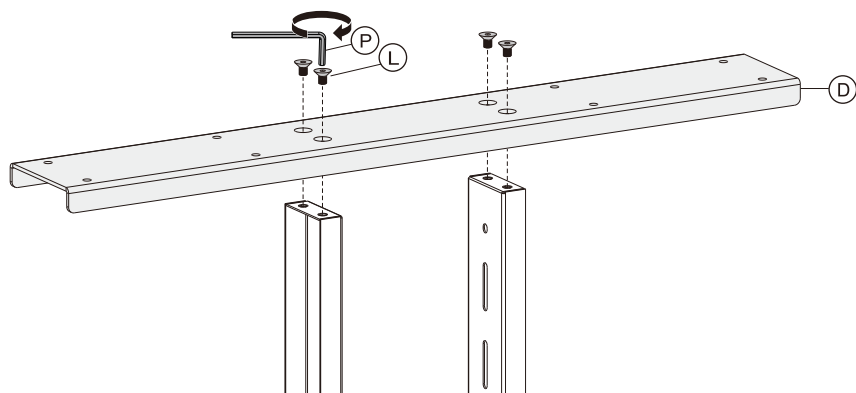 




6

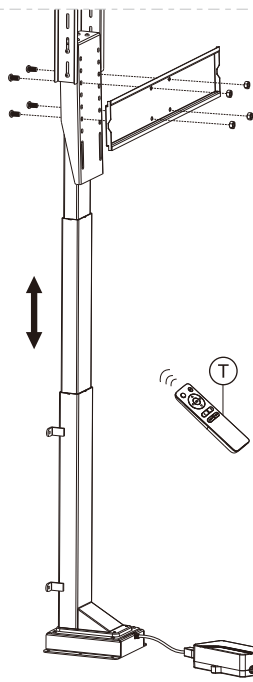 

  
- 1** Note: Match the remote control with the control box for the first use. Instructions on Page 10.

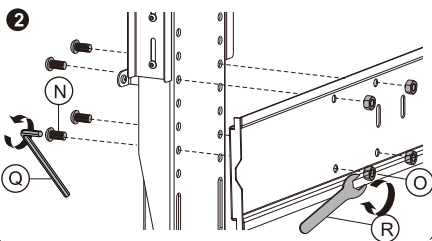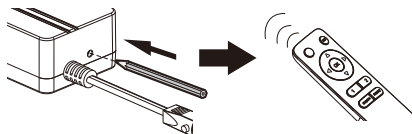



7

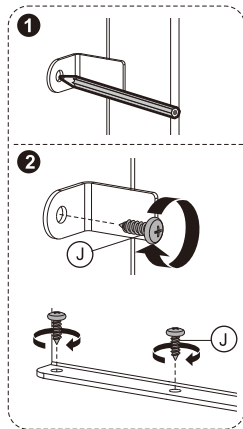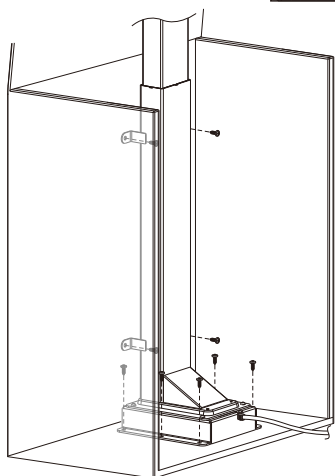   


8

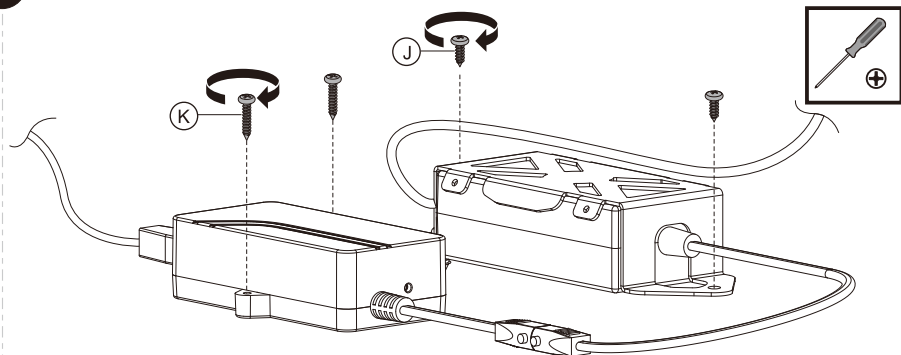 


9

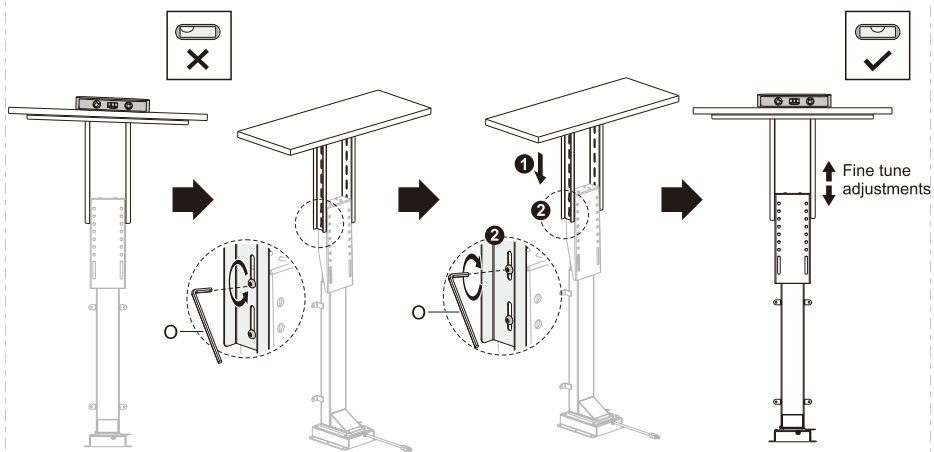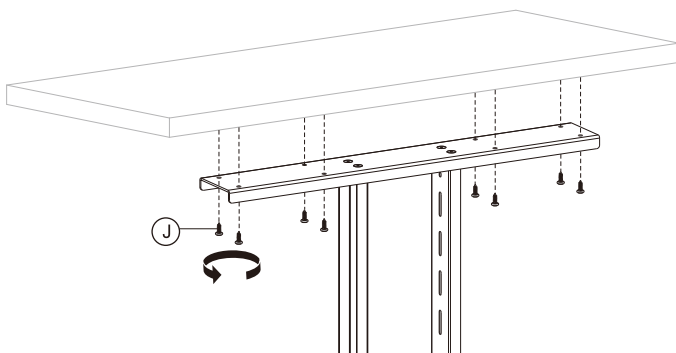  

10a

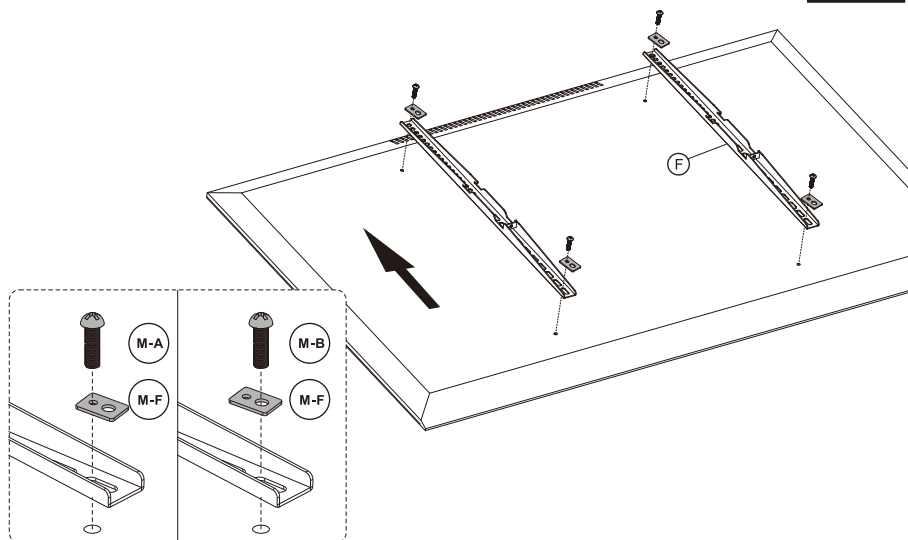 


10b

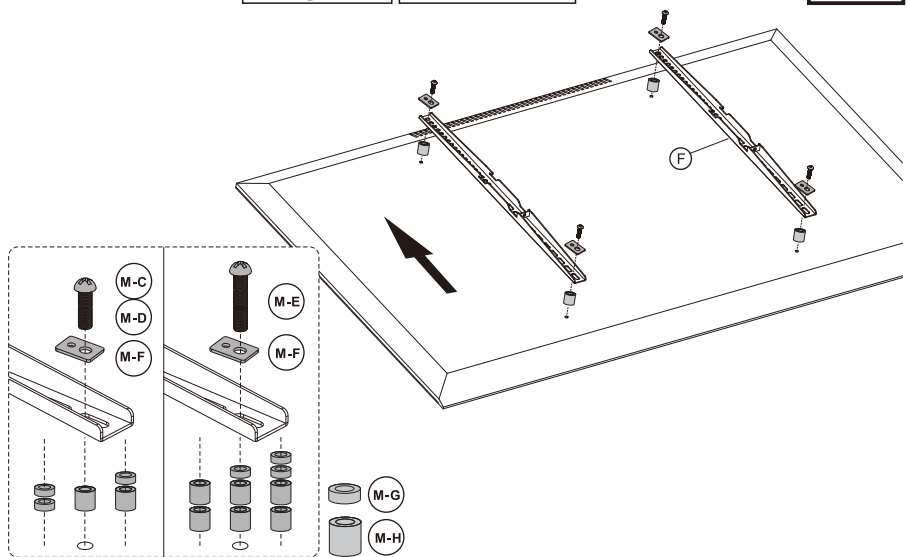 


11

 Note: Attach TV with the column adjusted to the lowest position.

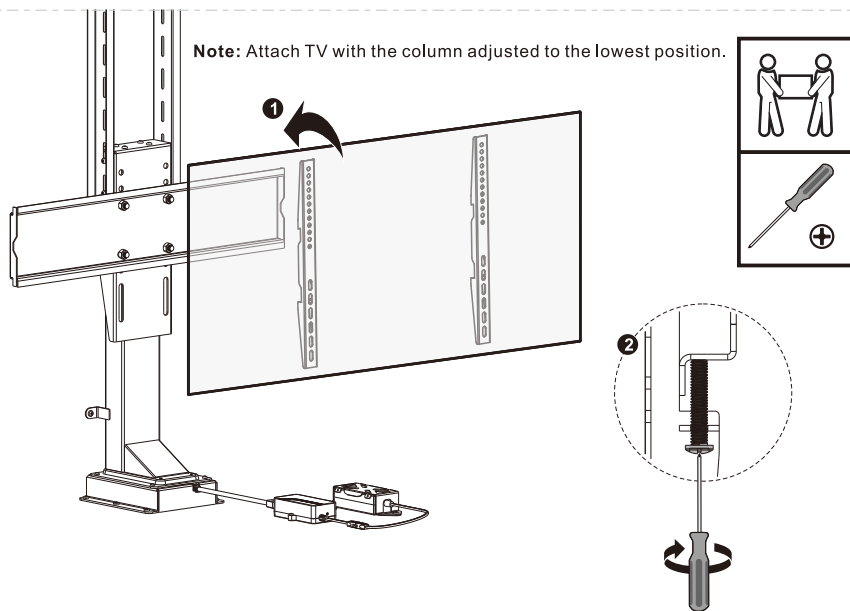


12

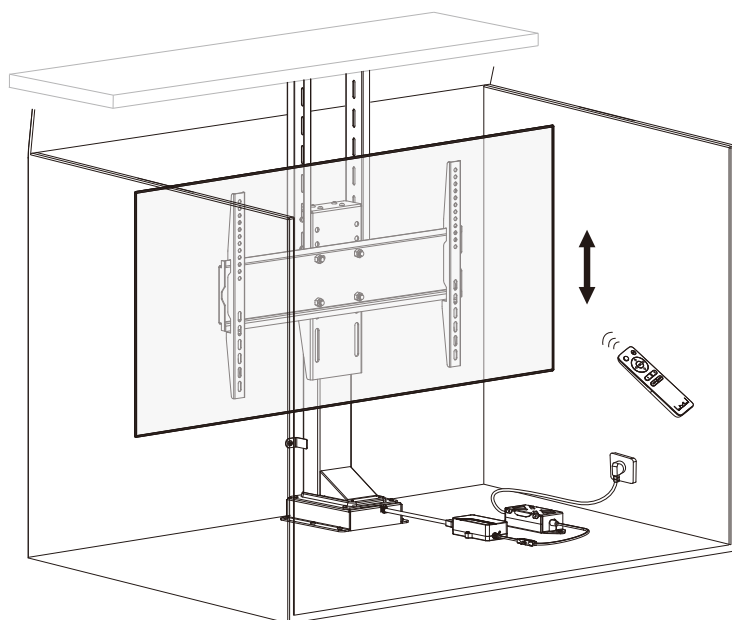 

Remote Control Operation Instructions

 A. Coding of Remote Control and Control Box

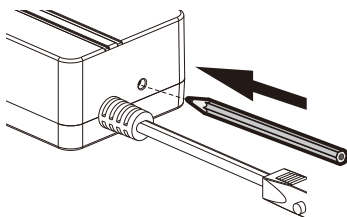


STEP1: When the mount is powered on, press the small button on the control box with a thin tool as shown. The unit will emit a beep, indicating that the control box is on standby for program coding.

STEP2: Press the “**SET**” button on the remote control, and you will hear repeated beeps for approximate 10 seconds indicating that the remote control is being programmed. The unit will emit a beep again indicating success.

Note: Clear up the historical data when replacing a new remote control to pair. Press the small button on the control box with hearing a beep, and hold for 5 seconds to confirm the data-cleaning process is completed until you hear a beep again.

 Remote Control Overview

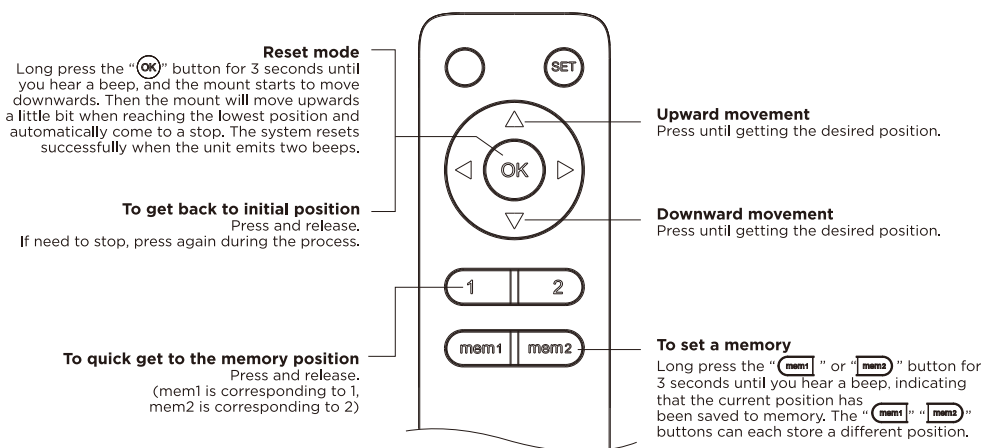

Troubleshooting Guide

In Front

This Troubleshooting Guide will assist you in identifying and solving common problems and answering questions you may have about the product. If the following guides can't help solve the problems, please contact your point of purchase for service and replace the accessories.

1. Error Sound Indication

A. The unit beeps once (when operating the remote control)

This indicates the remote control command is invalid (e.g., the TV mount is at its lowest or highest position). Follow the instructions in the manual to properly operate the mount.

B. The unit beeps twice:

Foreign objects have obstructed the mount from moving. Remove any objects within the range of motion.

C. The unit beeps three times:

- The motor cords were disconnected. Check the connection. Unplug and reinsert the motor cords, then reset the system. If it doesn't work, replace the motor cords.
- The reset process was interrupted. Please strictly follow the instructions to reset the system.

D. The unit beeps four times:

The system may be overheating. Stop operating and allow the TV mount to cool down and remain idle for 18 minutes.

E. The unit beeps five times:

- A voltage abnormality has occurred. Please check the AC adapter. Unplug and reinsert the adapter, then reset the system.
- The weight of the TV may exceed the maximum weight limitation of the mounting system. Please replace the TV with one that meets the weight requirement. Unplug and reinsert the adapter, then reset the system.



F. The unit emits a long beep (when operating the remote control):

The weight of TV may exceed the maximum weight limitation of the mounting system. Please replace the TV with one that meets the weight requirement.

2. Possible reasons motorized mount does not respond to remote control

- The AC/DC end of the power cord may be unplugged/disconnected from the outlet/mount. Check the connection to ensure the unit has power.
- The remote control operating distance may be too far and not in range of the mount. The acceptable range should be less than 30 feet (10m).
- The batteries in the remote control may be low or dead. Replace the batteries.
- The remote control may be broken. Check to see if the indicator LED found on the remote lights when a button is pressed. If so, contact your place of purchase for replacement.

  RJ45

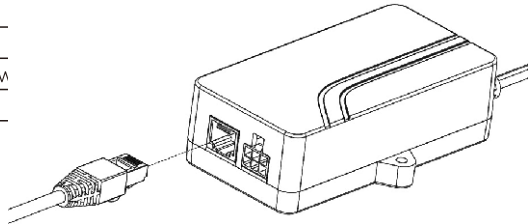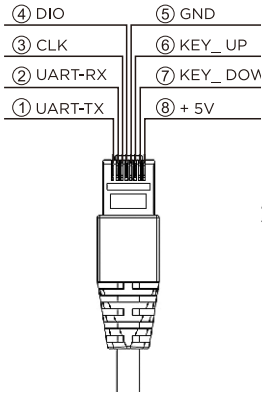

RJ45 located on the AC adapter

IMPORTANT

This motorized TV lift consists of a heavy-duty mounting bracket and a powerful lifting system. Please read and completely understand this manual before installation in order to make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics.

Safety feature/ Block Overheating feature/ Wait

- The lift has a built-in safety protection function that automatically stops the movement if something blocks it or if the motor overheats (the unit beeps four times after pressing the button) Let the TV lift cool down for 18-30 minutes before operation again.

Instructions of Safety and Warnings:

- Any Failure to Comply with the Safety and Installation Instructions in this Manual may Cause Serious Bodily Injury.
- Any Incomplete Observation of the Instructions, Warnings and Additional Information Marked with the "Note" Symbol may Result in Serious Damage to the System or its Components.
- This Product can be Used by Children Aged from 8 Years and above if They have been Given Supervision or Instruction Concerning Use of the Appliance in a Safe Way and Understand the Hazards Involved. Children shall not Play with the Appliance. Cleaning and User Maintenance shall not be Made by Children without Supervision. Unplug if doesn't use the System for long time and Place the Power Plug out of Children Reach.
- Persons with Reduced Physical, Mental Abilities and or Lack of Experience and Knowledge must not Use the Product, unless They're under Supervision, Understand the Hazards involved or they have been Thoroughly Instructed in the Use of the Apparatus by a Person who is Responsible for the Safety of these Persons.
- Users should Make Sure that They Never Lean against the TV Mounted on the Product in Order to Prevent Serious Bodily Injury.

Electrical Safety Instructions

- The product is powered by electricity. In order to avoid burns, fire and electric shock, please read the instructions carefully.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Never operate the system with a damaged cord or plug. Please contact your point of purchase to replace the damaged parts.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Alterations of the Given Control Unit and Remote Control aren't allowed. If either of them is missing or faulty, contact your place of purchase for a replacement.
- Outdoor use is prohibited.

Other Safety Instructions

- Clear up all obstacle within the range of motion.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.
- Don't add anything to the opening of the product.

Disposal:



The product with this mark indicates that this product shouldn't be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.